



"Single Camera" Set Up

Your encoder has been pre-configured to broadcast to your custom streaming page.

IMPORTANT: Please be mindful that when you go "live" on the encoder, you are actually live on your streaming page. Anyone who has access to it (students, parents, colleagues) can see and hear your video stream and conversations.



- 1. Mount the encoder on the camera using the shoe adapter bracket or use Velcro to attach the encoder to the tripod.
- 2. Connect the HDMI cable between your camcorder and the encoder
- 3. Connect the encoder to the internet via an Ethernet cable (Cat 5 type) or WIFI. If you use WiFi, you may need your network administrator to assist with bypassing your school's firewall and network security.
- 4. Make sure the camera and encoder are connected to a power source and turn them on. The encoder has an internal battery which, when charged, lasts 45 minutes to 1 hour.
- 5. Press the "live" button on the encoder, and you are now "live" to your streaming website.





After your live broadcast, go to the Admin Page (supplied to you via email link) to "enable" the video on your site's VOD page. Admin Page instructions can be found on the support page of our website.

Other Options

Connect your external mic to EXT MIC jack of camcorder for improved audio or when you have a lot of ambient noise. NOTE: your boom mic may need a battery.

Headphones can be connected to the encoder's (or camera's) Headphone Jack to monitor audio levels.

Please note:

- We recommend you test the streaming on your site before the event. View your streaming site with a computer, tablet or smartphone (with internet connection) before
 - the event to ensure your streaming is working and settings are correct.
- If you see display settings on the video stream (focus square, settings, etc), they are coming from the camcorder. Please go through the camcorder settings and make sure your "display" settings or OSD is turned OFF.